

## Ansyes 2022 R2 installation

1. Ansyes software is located on [\\kbpvmsa037\FEM\Software\Ansys\Ansys 2022 R2](#)

kbpvmsa037 > FEM > software > ANSYS > ANSYS 2022 R2 >

Name	Date modified	Type	Size
ANSYSLICMAN_2022R2_WINX64	2022/08/15 14:34	File folder	
ANSYS2022R2_WINX64_Disk1	2022/07/28 13:40	Disc Image File	5 750 792 KB
ANSYS2022R2_WINX64_Disk2	2022/07/29 08:45	Disc Image File	4 536 872 KB
ANSYS2022R2_WINX64_Disk3	2022/07/29 09:10	Disc Image File	6 005 794 KB
ANSYSLICMAN_2022R2_WINX64	2022/07/29 11:36	Compressed (zipp...	418 729 KB



2. Double Click Disk 1 to mount the ISO. It will open to the setup folder once it is mounted.

DVD Drive (D:) ANSYS2022R2 >

ANSYS2022R2

Name	Date modified	Type	Size
builddate	2022/06/06 16:34	Text Document	5 KB
LICENSE	2022/06/06 16:34	Text Document	67 KB
package.id	2022/06/06 16:34	ID File	1 KB
setup	2022/06/06 16:34	Application	15 178 KB
222-1.dvd	2022/06/06 16:34	DVD File	1 KB
tp	2022/06/06 16:34	File folder	
util	2022/06/06 16:34	File folder	
subs	2022/06/06 16:34	File folder	
syscplg	2022/06/06 16:34	File folder	
soundias	2022/06/06 16:34	File folder	
sgcharts	2022/06/06 16:34	File folder	
sherlock	2022/06/06 16:34	File folder	
prereq	2022/06/06 16:34	File folder	
optislang	2022/06/06 16:33	File folder	
manifest	2022/06/06 16:33	File folder	
meshing	2022/06/06 16:33	File folder	
licserv	2022/06/06 16:33	File folder	
lmcenter	2022/06/06 16:33	File folder	
instcore	2022/06/06 16:33	File folder	
instutil	2022/06/06 16:33	File folder	
license	2022/06/06 16:33	File folder	
fwgfc	2022/06/06 16:33	File folder	
hlp	2022/06/06 16:33	File folder	
icemwib	2022/06/06 16:33	File folder	
distortion_compensation_addin	2022/06/06 16:33	File folder	
dpf	2022/06/06 16:33	File folder	
framework	2022/06/06 16:33	File folder	
cpythcloudext	2022/06/06 16:33	File folder	
cpythext	2022/06/06 16:33	File folder	
cpythnew	2022/06/06 16:33	File folder	
commoninstall	2022/06/06 16:33	File folder	
corewb	2022/06/06 16:33	File folder	
common	2022/06/06 16:33	File folder	
apiprv	2022/06/06 16:33	File folder	
blademodeler	2022/06/06 16:33	File folder	
ccm	2022/06/06 16:33	File folder	
clclient	2022/06/06 16:33	File folder	
ansys	2022/06/06 16:33	File folder	
anscust	2022/06/06 16:33	File folder	
sas	2022/06/06 16:33	File folder	
acp	2022/06/06 16:33	File folder	

- Right click the Setup.exe and select run as Administrator. Type your Administrator(a-account) log in details when you are presented with a pop-up box

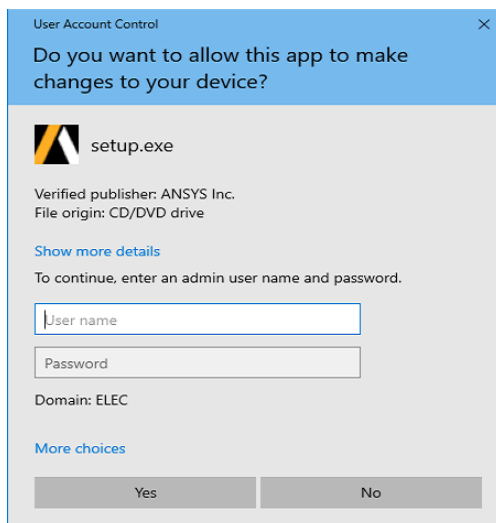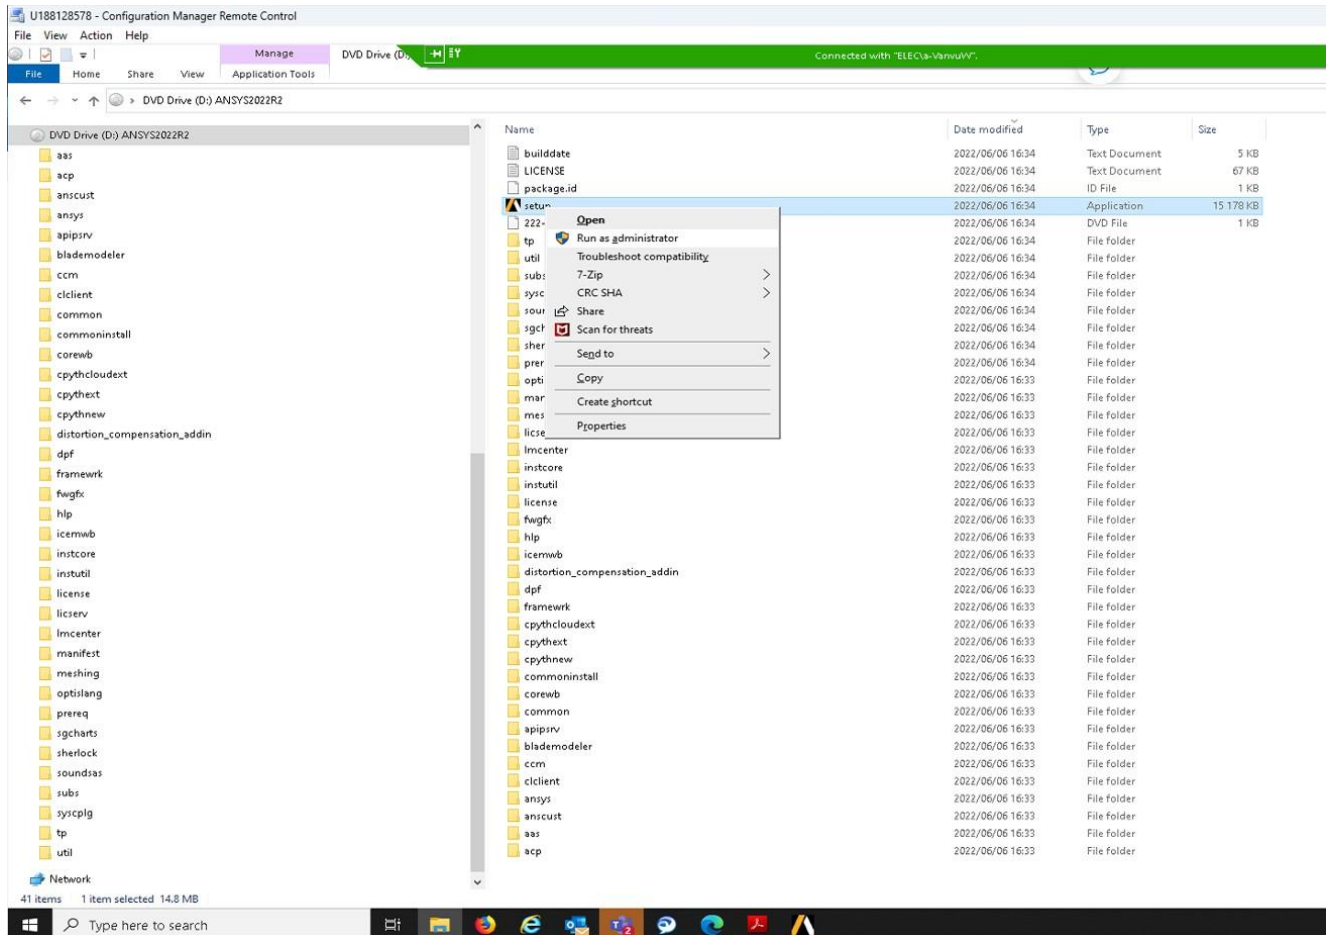


 <b>NKGWETE</b> IT SOLUTIONS	<b>How-to-Guide</b>	Reference No:
		Effective Date:
		Revision: 1
		Document type: How-to-Guide

- Once the Install screen is open, select Install Ansys Products




- Select Agree and click on Next

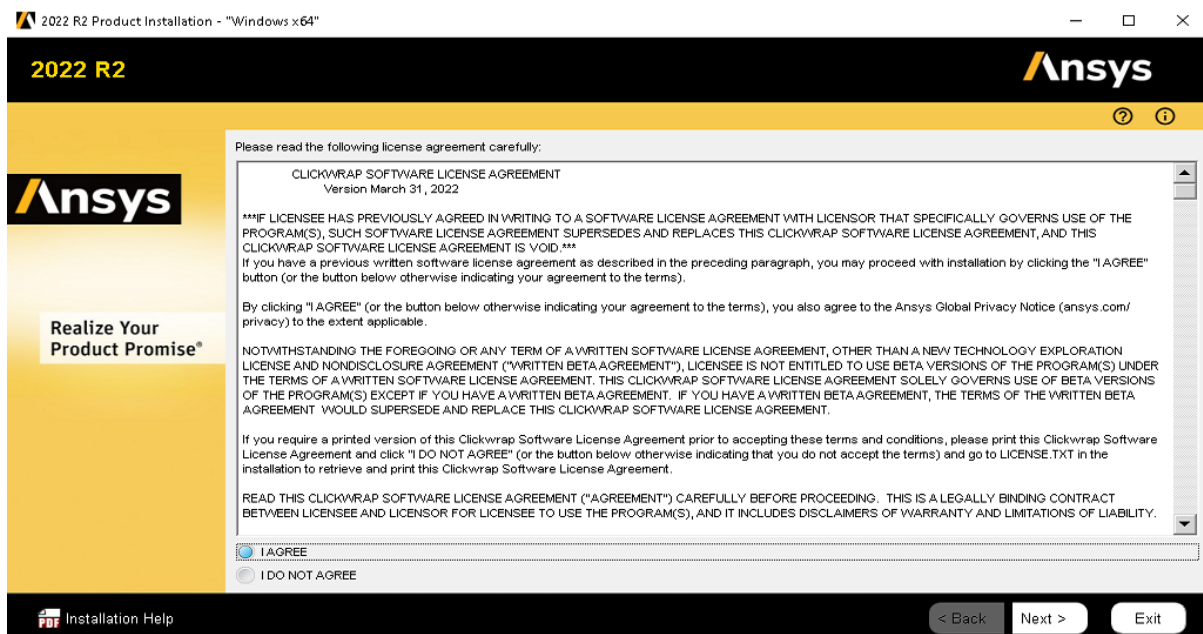


	<h1>How-to-Guide</h1>	Reference No:
		Effective Date:
		Revision: 1
		Document type: How-to-Guide

## 6. Click Next

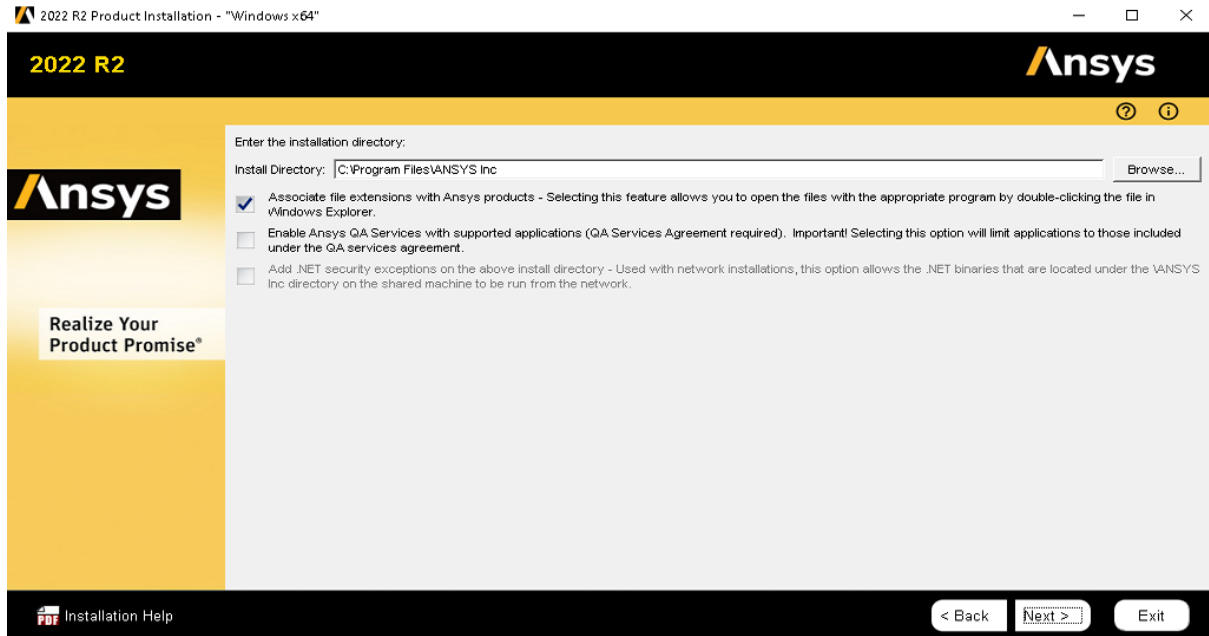


## 7. Click Next

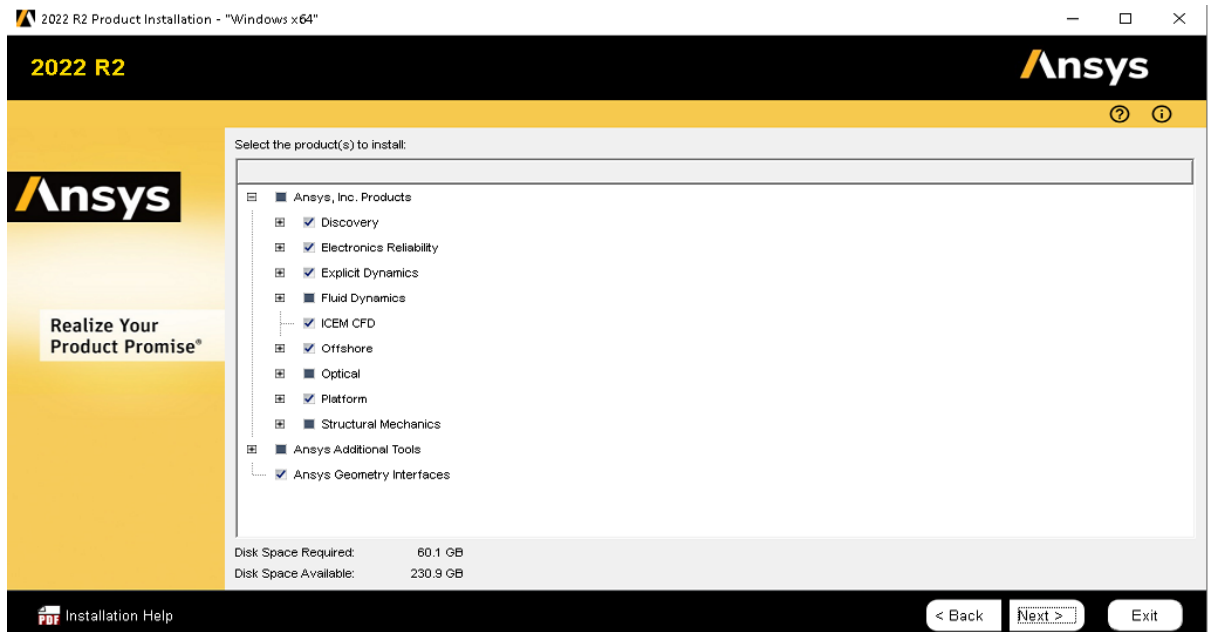


	<h2>How-to-Guide</h2>	Reference No:
		Effective Date:
		Revision: 1
		Document type: How-to-Guide

8. Select: No, Skip Configuration. I will configure later and click Next

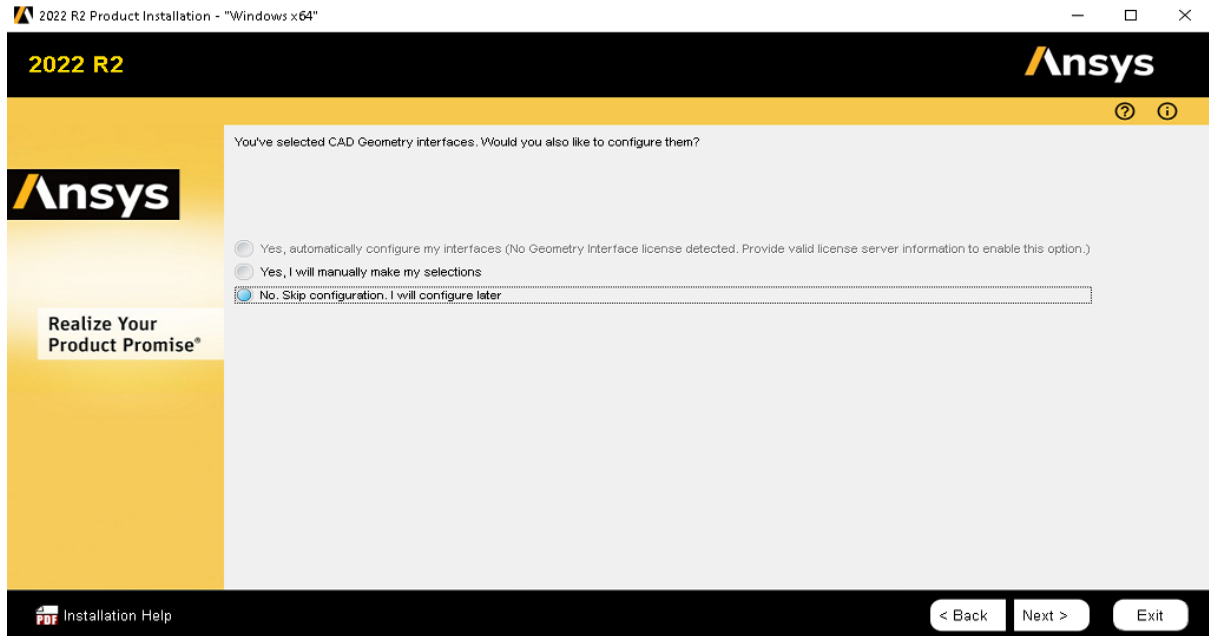


9. Click Next

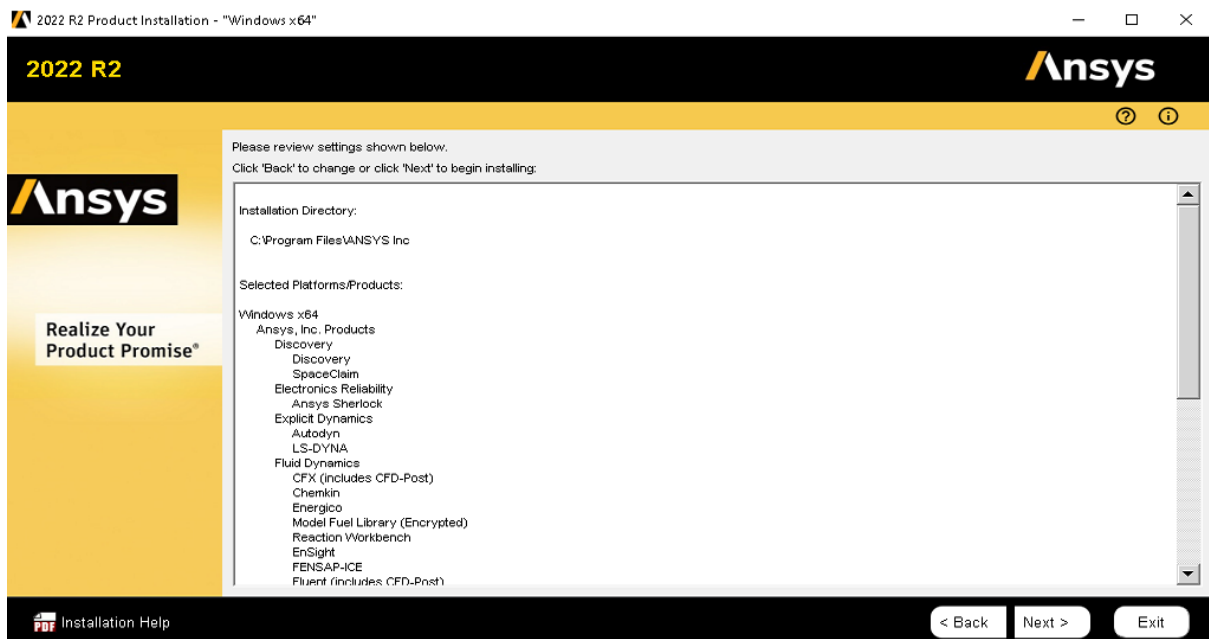



	<b>How-to-Guide</b>	Reference No:
		Effective Date:
		Revision: 1
		Document type: How-to-Guide

#### 10. Wait for the installation to start

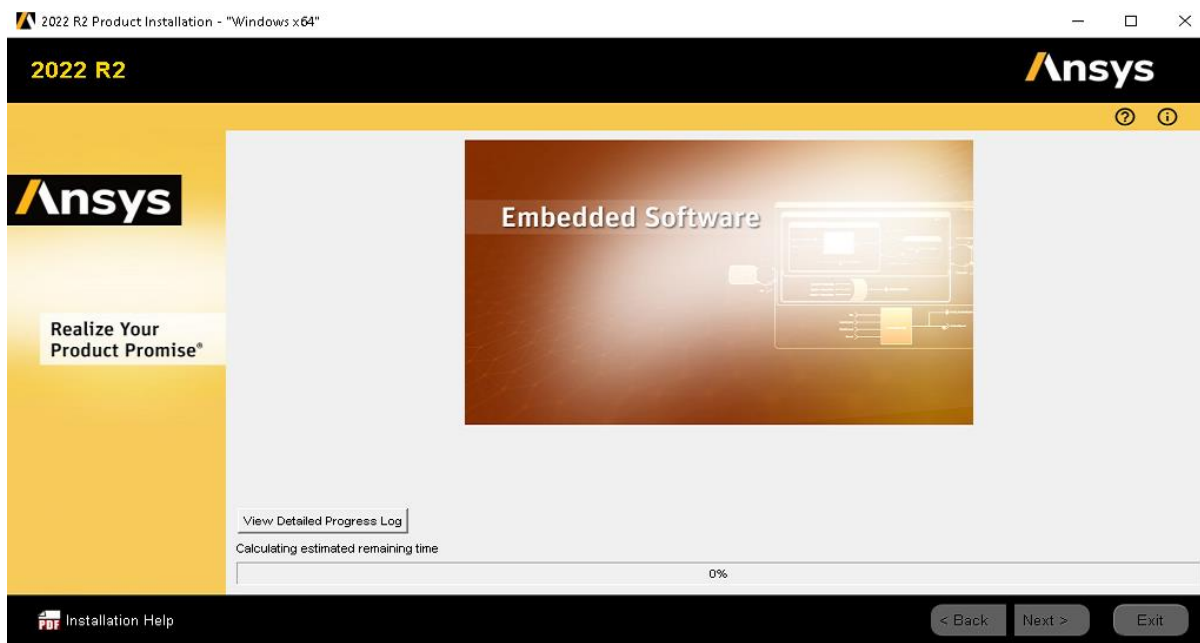

	<h2>How-to-Guide</h2>	Reference No:
		Effective Date:
		Revision: 1
		Document type: How-to-Guide

11. Once asked for the 2<sup>nd</sup> Disk, direct to your DVD Drive(D:) (ISO that was mounted). Right Click it and select Eject

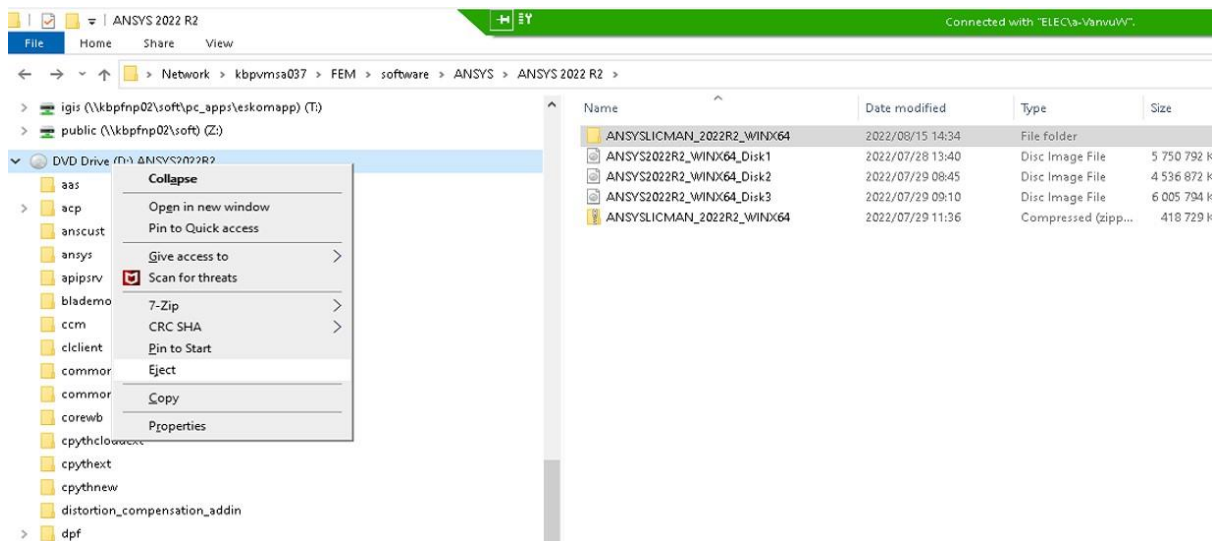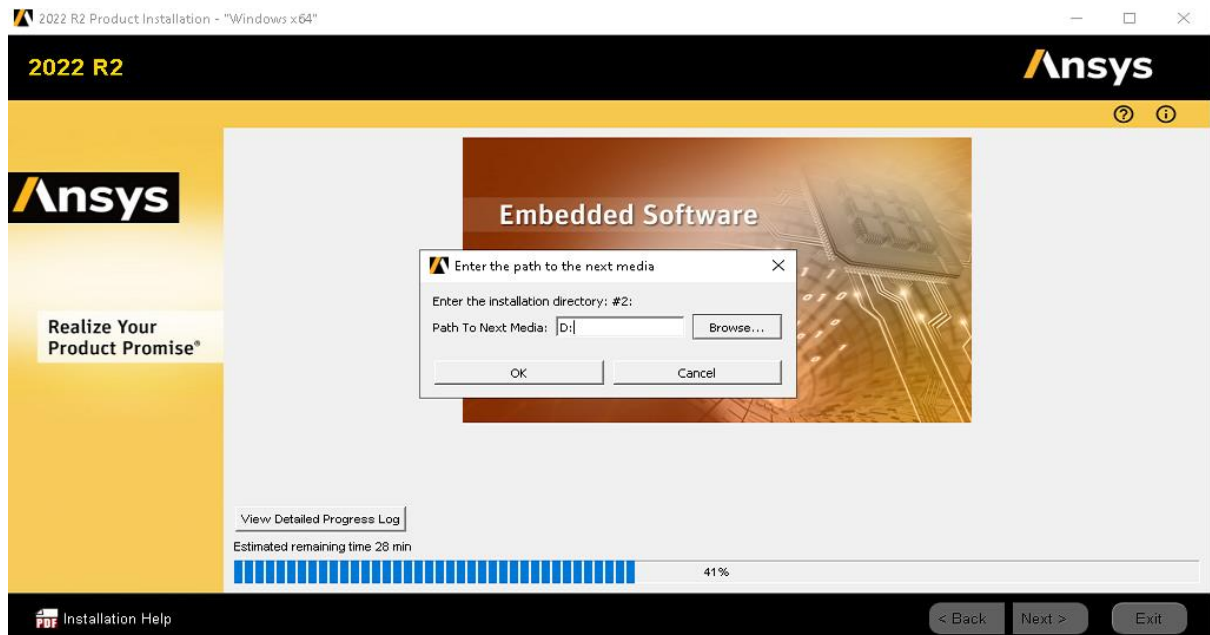




	<h2>How-to-Guide</h2>	Reference No:
		Effective Date:
		Revision: 1
		Document type: How-to-Guide

12. Direct back to the Installation Files(ISO`s) and Double click Disk 2 to Mount it. Once the Disk is Mounted, Go back to the Installation screen and Click on OK. Wait till you are requested for Disk 3. Follow step 11 and 12 for the 3<sup>rd</sup> Disk as well

kbpvmsa037 > FEM > software > ANSYS > ANSYS 2022 R2 >

Name	Date modified	Type	Size
ANSYSLICMAN_2022R2_WINX64	2022/08/15 14:34	File folder	
ANSYS2022R2_WINX64_Disk1	2022/07/28 13:40	Disc Image File	5 750 792 KB
ANSYS2022R2_WINX64_Disk2	2022/07/29 08:45	Disc Image File	4 536 872 KB
ANSYS2022R2_WINX64_Disk3	2022/07/29 09:10	Disc Image File	6 005 794 KB
ANSYSLICMAN_2022R2_WINX64	2022/07/29 11:36	Compressed (zipp...	418 729 KB

13. Wait for the Installation to Finish, then click on Exit. Once you are done with the installation, direct back to the DVD Drive(D:), right click and Eject

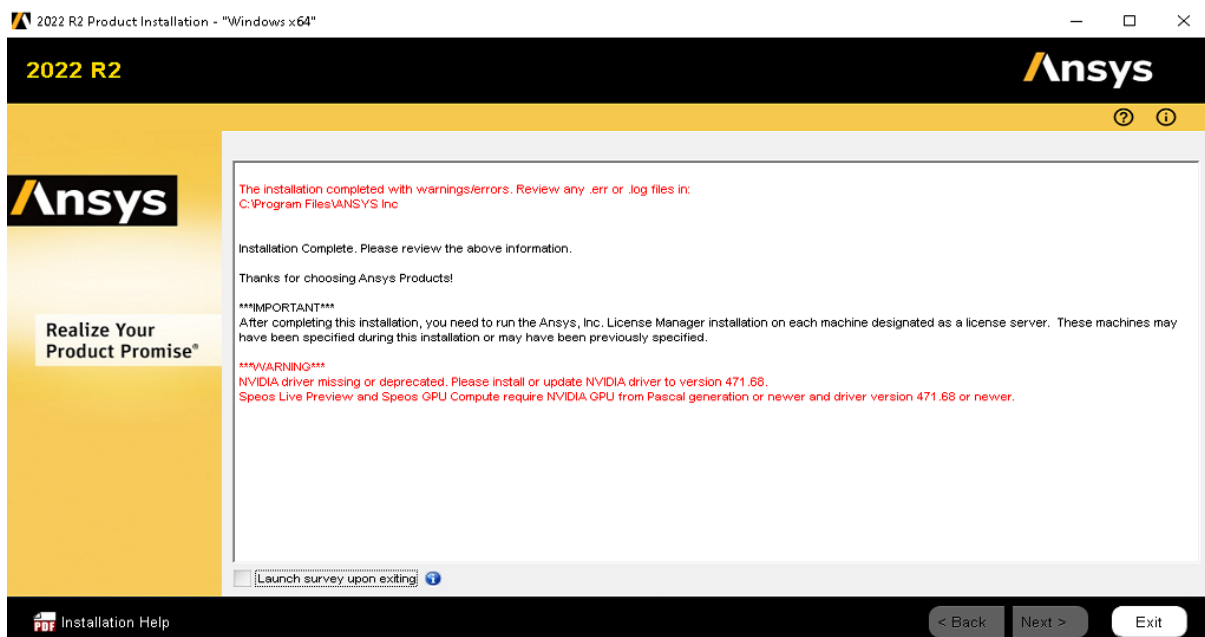




	<b>How-to-Guide</b>	Reference No:
		Effective Date:
		Revision: 1
		Document type: How-to-Guide

14. Now Open the Start Menu and direct to the Folder Ansys 2022 R2. Look for Ansys Client Licensing Settings 2022, right Click it and Select Run as Administrator. Type your admin details(a-account) once presented with the pop-up box. Type the Following in the Port and in the Server 1 boxes and click on add:

- Port Number: 1055
- Server 1: kbpvmsa037

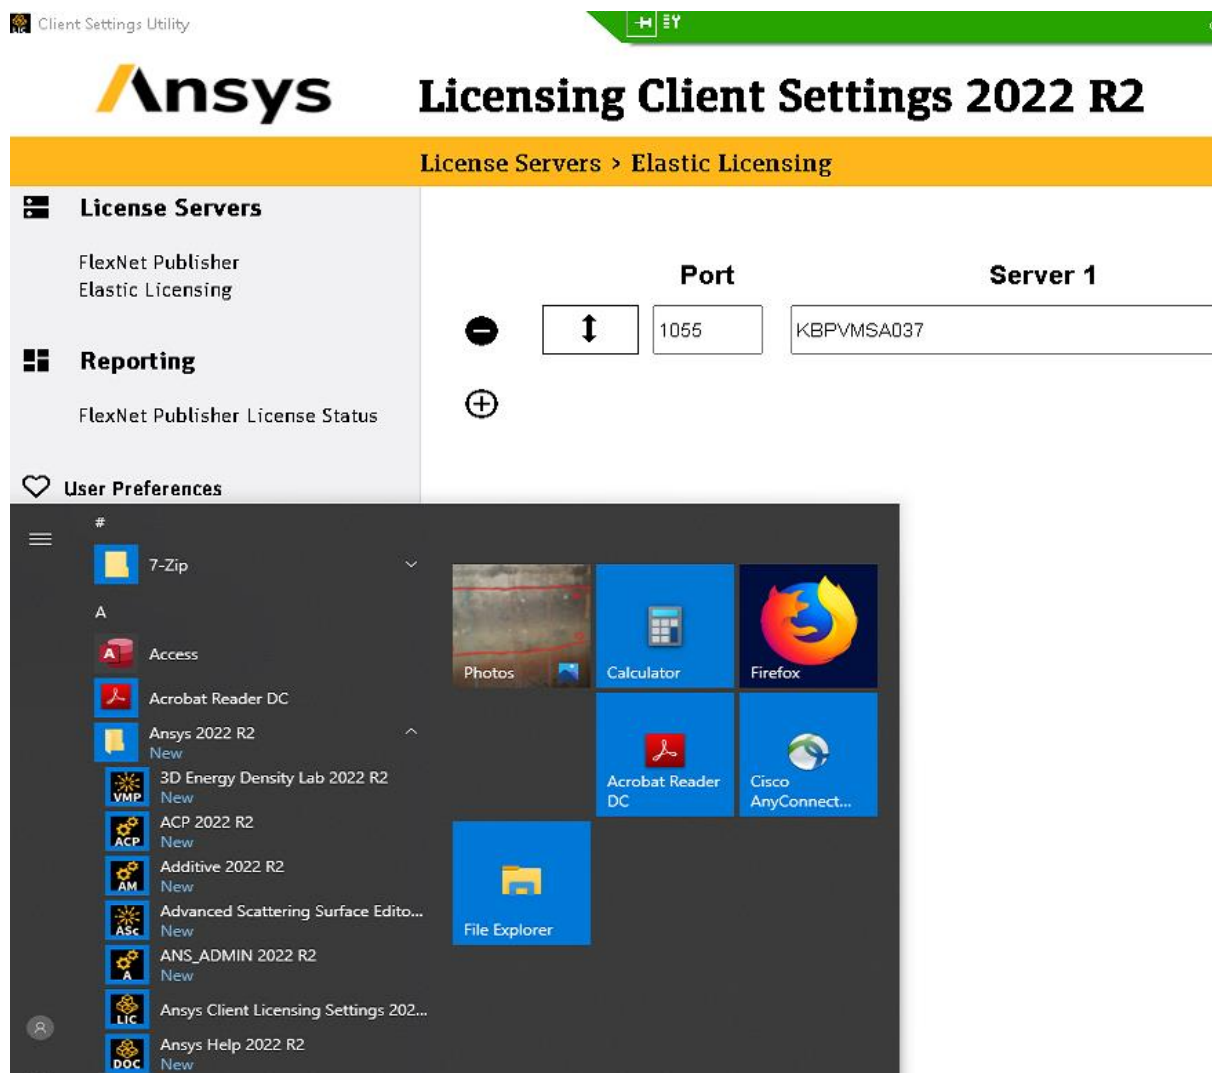

Close the screen once it has been added successfully. User can test the software.